



Cap Mounting

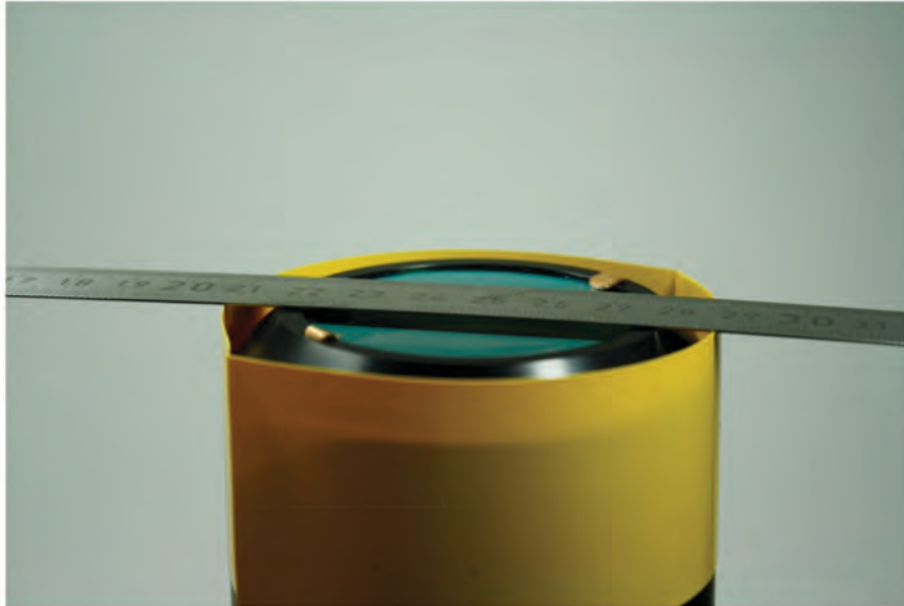

1. Place the tubing over the lens, up to the top of the filter cap.

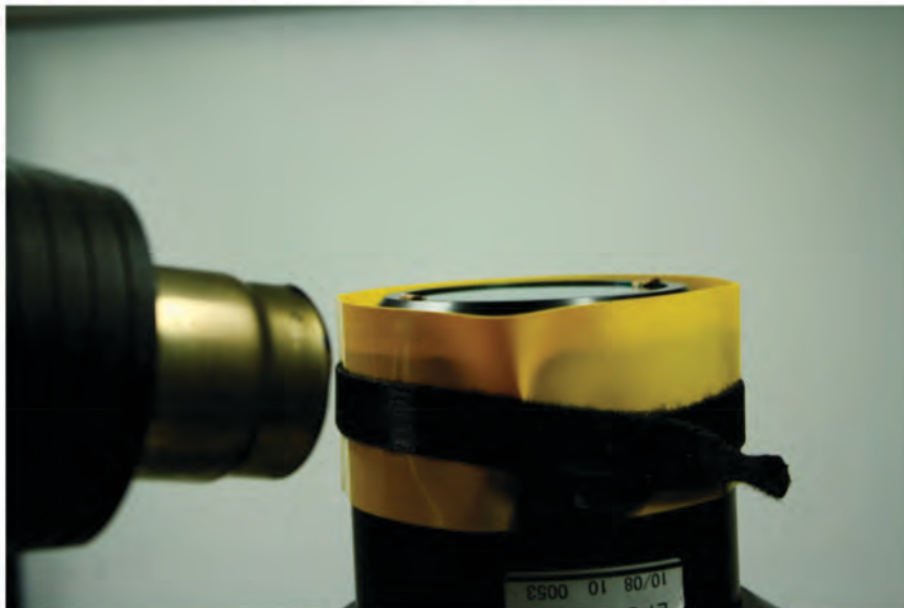

2. Pull the Velcro strap on tight. The soft side should be on the lens because of the friction. The shrink tubing can not slip now. Heating the heat shrink tube roughly at 120°C until the mold is reaching.



3. The Velcro strap can now be removed.



4. The tube keeps the form and can be used for several times.